




### Measurement Guidelines for QUANTAPANEL® 700 Series

1. Measurements should be taken to the nearest 1/8th inch.
2. Take two (2) measurements of the HEIGHT of the opening and two or three (2 – 3) measurements of the WIDTH as shown in the diagram. Record the smallest WIDTH and smallest HEIGHT to the nearest 1/8th inch.
3. To ensure alignment with the meeting rails of the existing double hung window, measure from the top of the opening to the bottom of the existing meeting rail. Record this value as HEIGHT UPPER (UP) to the nearest 1/8th inch.
4. A Sill Expander is optional; it provides the ability to extend an additional 3/8 inch during installation to square up against the sill.
4. The Installation Methods for the 700 Series is:
  - MAKE SIZE** (we produce to exact tip-tip measurements).
5. The Installation Reference can be used to identify the floor/room/location. This information will be printed on the product label and packaging documents.

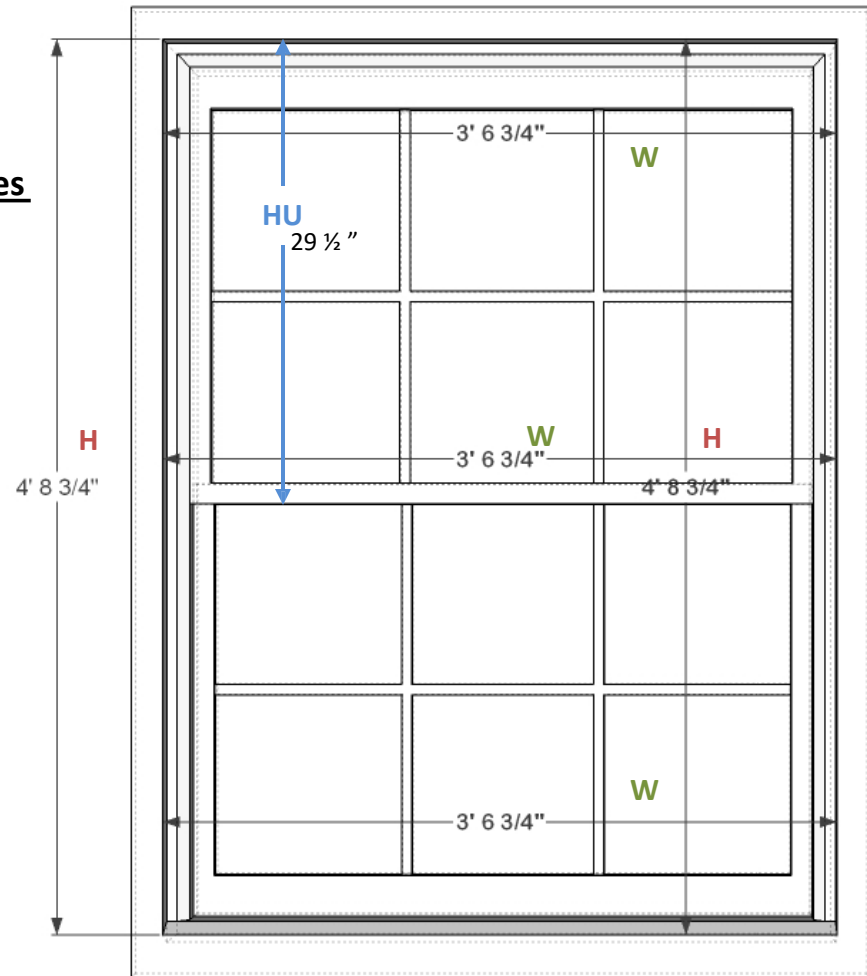

ITEM	MODEL (STYLE)  <b>700 SERIES</b>	EXISTING OPENING		HEIGHT UPPER (ORIEL CONFIG)	SILL EXPANDER TYPE: 0, 1"	INSTALL METHOD  <b>MAKE SIZE</b>	COLOR (NS)	QUANTITY	INSTALLATION REFERENCE
		WIDTH (W)	HEIGHT (H)						
1	<b>704-DH</b>	<b>32 <sup>3</sup>/<sub>4</sub></b>	<b>56 <sup>3</sup>/<sub>4</sub></b>	<b>29 <sup>1</sup>/<sub>2</sub></b>	<b>1"</b>	<b>MAKE SIZE</b>	<b>WHT</b>	<b>1</b>	<b>KITCHEN</b>



**INTERIOR VIEW**



**EXTERIOR VIEW**

# QUANTAPANEL 704-DH (706-SL) FRAME DIMENSIONS

